

## How to reset the limits on the Hormann Rollmatic (Series 2 / Series 3)



1. Disconnect the unit from the mains power supply
2. Press and hold the 'T' button whilst plugging the unit back into the mains.

The courtesy light will flash once and the red light around the 'T' button will start to flash, you can now release the button.

3. Press and release the 'T' button.

The courtesy light will flash and the door will then automatically open and close a number of times to set the open and close limits. It will finish in the open position and the courtesy light will stop flashing and stay on.

The door is now completely reset.

**Please Note: This will not affect any devices coded into the unit (hand transmitters, keypads etc). These will continue to operate the door.**