

Information

PROGRAMMING ansa REMOTE KEY FOBS

Adding Key Fobs


Press the operating button for 5 seconds and release when the LED indicator goes out. The LED will flash once to confirm programming mode. Take the new key fob to be added and press the button once. The red LED indicator should flash once. Repeat this for every new key fob to be added to the system. After the last key fob has been added either wait 30 seconds or press the operating push button once to reset to normal operation.

Deleting Key Fobs

It is not possible to selectively delete key fobs and selecting delete mode will erase all key fobs from the system. Switch off the power supply to the unit and remove the front cover. Turn on the last Dip switch to the right and re-power the unit. The circuit board mounted yellow 'set radio' LED will illuminate for 5 seconds, all key fobs are now deleted. Switch off the power supply, turn off the last Dip switch to the right and re-fit the front cover. Key fobs can now be added using the 'Adding Key Fobs' procedures.

Multi-Door Control

Four types of key fobs are available 1, 2, 3 or 4 buttons, therefore up to four doors each fitted with a standard RS-1 control unit can be controlled independently using a single key fob. Simply select the key fob button you wish to use with a particular door and programme the key fob using the 'Adding Key Fobs' procedures.

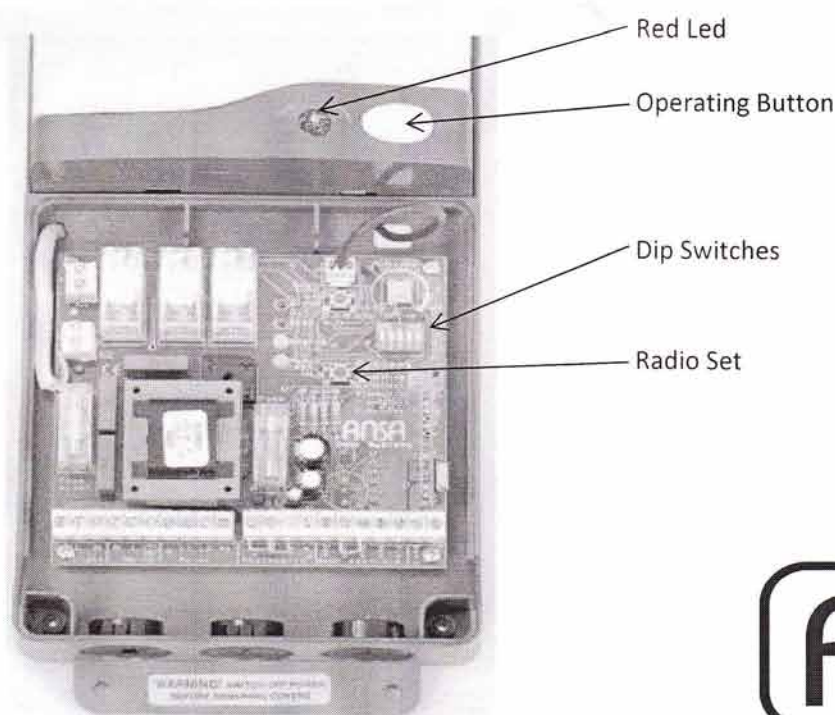

3 Button Key Fob



Note

The remote control system uses the latest 'rolling code' technology. Key fobs supplied are pre-programmed. The receiver can memorise the codes of 15 key fobs. Upgrade memory chips are available for 31 or 62 key fobs by special order.