



INFO SHEET ABi007

Series 3 Supramatic

Procedure to delete all the codes from SupraMatic series 3.

1. Press and hold the 'PRG' button until the menu displays '**00**'
2. Press and release the up arrow to move up through the menu until you reach menu '**40**'
3. Now press and hold down the PRG button – '**40**' will start to flash then flash quicker with a dot in the bottom right '**40.**'
4. You can now release the PRG button
5. Use the down arrow to move back down to menu '**00**'
6. Press the PRG button

The display should now show a horizontal line to indicate the position of the door and no hand transmitters should now activate the operator.