

## Hormann series 3 and 4 BiSecur Hand Transmitters – transferring codes.

**Please Note: To transfer the code from one hand transmitter to another, the signal strength needs to be very strong. This means the units need to be very close together and have good battery power.**

**The procedure is more reliable if the receiving transmitter is on the left hand side, ideally in direct contact with the sending / existing transmitter, with their tops level (see image below).**

### Section1

Transferring the code from a BiSecur hand transmitter to a BiSecur hand transmitter.



(Please be aware this will activate your device / garage door!)

1. Press and hold the button on your existing hand transmitter (which has the code you want to transfer.)

The LED will illuminate constantly then start to flash red and blue, keep the button pressed down until the code has been successfully transferred.

2. Once the first hand transmitter has started to flash red and blue, press and hold the button on the hand transmitter which is to receive the code. The LED will flash blue slowly for a few seconds then flash quickly for a few seconds, and then stop with no illumination (on later edition transmitters, when

receiving a code, the LED will show solid blue first for a couple of seconds before flashing blue)

The code has now been transferred. You can continue this process to transfer the code to different buttons.

### **Please note - series 4 operators**

Series 4 operators will not activate with a cloned code until an additional process of coding the hand transmitter into the head unit has been completed.

1. Once the code has been transferred to a new transmitter, you will need to press and hold the coded button down whilst in range of the head unit.
2. The display will first show a flashing '11' on a Supramatic series 4 or the LED will flash red on a promatic series 4.
3. After a few seconds the hand transmitter will then start to flash red and blue. – The display on a Supramatic will then flash '11' rapidly or the LED will flash red rapidly on a promatic series 4.
4. The hand transmitter should now activate the operator.

## Section 2

To reset a BiSecur hand transmitter (erasing and resetting all the codes to 128bit mode)



1. Remove the battery for 10 seconds.
2. Press and hold one of the buttons on the hand transmitter and re-insert the battery (and battery cover for the HS1BS / HS4BS / HS5BS).
3. The LED will start a series of flashes –

Blue flashing - slow for 4 seconds, fast for 2 seconds, on solid for a short time.

4. Release the button as soon as the series of blue flashes has finished. Do not continue to hold the button through the red series of flashes as this will reset the transmitter into 40 bit mode.

The hand transmitter is now in 128 bit mode all the codes for each button are reset. The LED will illuminate BLUE when the buttons are pressed.

## Replacing / Removing Batteries.

The Hormann HS1BS, HS4BS and HS5BS have a removable battery cover that is unlocked and locked by turning.

The HSE2BS has a removable back cover that needs to be prised off with the use of a small screwdriver or tool.

HS1 BS / HS4 BS / HS5 BS



HSE2 BS

