

INFO SHEET ABi027

Promatic Series 4

Procedure to select the door type on the ProMatic operator.



It is only possible to set DIP switch 1 if the operator is not 'taught in'. If you change the DIP switch on a taught-in operator, an error (flashing 8 x) will display when trying to operate the door.

Reset the door (see [abi024.1_series_4_reset_promatic](#))

For sectional type door leave DIP switch 1 OFF

For other door types:

Set DIP switch 1 to the ON position. Press and release the 'T' button to set the desired number of red flashes as follows.

DIP 1 Switch OFF

DIP SWITCH 1	FLASHING	DOOR TYPE
OFF	N/A	Sectional
ON	1 x RED	Up and Over
ON	2 x RED	Side sliding long soft stop
ON	3 x RED	Side sliding short soft stop
ON	4 X RED	Horizontal garage door

Once the door type is selected press the 'P' button to set.

Continue with teaching in the limits for the operator.