

INFO SHEET ABi028

SupraMatic Series 4

Deleting codes from SupraMatic series 4

1. Press and hold the 'PRG' button until '00' is displayed
2. Use the arrow buttons to navigate to menu 19 (display shows '19')
3. Press and release the 'PRG' button. The display should then show '00'
4. Use the arrow buttons to select the desired option to delete as follows.

00	Back without deleting any codes
01	Radio codes only – hand transmitters / wall buttons etc
02	Bluetooth only – smart devices using the Hörmann Bluesecur app
03	Not used
04	Delete all devices – radio and bluetooth

5. Once you have selected the desired option, press and hold the 'PRG' button for approximately 5 seconds. The chosen option number should move to flashing rapidly then revert back show '19'
6. Use the arrow buttons to navigate to menu 00 (display shows '00')
7. Press 'PRG' button to exit the menu

The display should now show a horizontal line to indicate the position of the door and the relevant codes are permanently deleted from the unit.

Community · Respect · Opportunity · Innovation · Whatever It Takes

Registered Address & Showroom: ABi Doors, 159–163 Buslingthorpe Lane, Leeds, West Yorkshire, LS7 2DQ

Registered in: England and Wales. Company number: 02441095. Company type: Private limited company

VAT number: 545420460