## **KEY-RC INSTRUCTIONS**

Please note the enclosed transmitter is a compatible replacement for the type with green & black buttons.

Before using your new transmitter it must be programmed into the receivers memory, the receiver is the box that controls the garage door or roller shutter.

## PROGRAMMING THE TRANSMITTER

Using an active transmitter, (one that has already been programmed into the receivers memory and is working), press both buttons simultaneously for approximately 5 seconds, the receiver (not the transmitter) will 'beep' indicating it is ready to learn new transmitter codes, stop pressing the buttons.

Press the STOP button on the new transmitter, the receiver 'beeps' confirming it has learnt the transmitters code, wait approximately 10 seconds, the receiver will 'beep' twice to indicate the learning cycle is complete. The new transmitter can now be used.



STOP = BLACK on older type transmitter

START = GREEN on older type transmitter